

UV/Visible/LED Curable Multi-Substrate Precision Medical Bonder

PRODUCT DESCRIPTION

InCure Cyrol-Weld™ 5942 UV/Visible/LED curable adhesive is an acid-free, multi-substrate bonder. It is an excellent choice for medical devices plastic assembly on flexible PVC to PC and dissimilar substrates such as metals, glass and FR4 materials on a single application. InCure 5942 exhibits enhanced excellent moisture and temperature resistance and is extremely tough material with high elongation of 350%. Ideal for bonding of medical devices requiring minimal drift in positioning medical optics. Meet ISO 10993-5. Ideal for bonding of devices subjected to thermal cycling, EtO or gamma sterilization.

UNCURED PROPERTIES

| | | | | |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|------------------|---------------------|------------|
| Chemical Type | Urethane Acrylate, 100% Solids, No Solvents | | | |
| Appearance | Single Component, Clear Transparent | | | |
| Density, g/ml | 1.02 | Refractive Index | 1.51 | @20°C |
| Flash Point, °C | > 93 | Toxicity | Low (Refer to MSDS) | |
| Viscosity, cP (rpm) | 20 | 200 - 400 | Spindle | 2 |
| Other viscosities are available upon request. If the viscosity range requested is not our standard offering, this product may be produced with a small lab fee. | | | | ASTM D2556 |
| Email us at: support@uv-incure.com or your nearest local distributor for more information. | | | | |

¹ Viscosity (cP) taken at 25°C - Call to enquiry for other viscosities.

CURED PROPERTIES

| | | |
|-------------------------------------------|---------------|-----------------------------------------|
| Shore Hardness, Durometer | D63 to D73 | ASTM 2240 |
| Linear Shrinkage / Expansion (-ve) | 0.02% | ASTM 570 |
| Water Absorption at 24hrs | 0.50% | ² ISTM D2566 |
| Tensile (PSI) | PC-PC / PC-SS | 6,800 ^A / 4,500 ^A |
| | PC-S / PC-AL | 5,000 ^A / 4,500 ^A |
| Surface After Full Cure | | Slight Tack |
| Elongation at Break | 6% | ASTM 638 |
| Thermal Range (Brittleness / Degrades) °C | -55 to 150 | ² ISTM D366 |
| Young's Modulus of Elasticity, MPa (PSI) | 212 (30,800) | ³ ASTM 638 |
| Average Linear CTE, ppm/°C | 15 | ² ISTM D696 |

² ISTM - refers to InCure Standard Test Method.


³ ASTM 638 Young's Modulus test speed @5mm/min for rigid and semi-rigid materials, @50mm/min for non-rigid materials, unless otherwise specified.

RECOMMENDED UV CURE SCHEDULE (FULL CURE)

| Full Cure Exposure Time | | UVA | UVB | UVC | UVV |
|-----------------------------------|--------------------|--------------------|--------|-------|-------|
| Fixture Time between glass slides | mW/cm ² | 150 | 43 | 5 | 140 |
| Exposure Time (s) | 1.0 | mJ/cm ² | 150 | 43 | 5 |
| F200P™ @3.75" Dist | 10.0 | mW/cm ² | 150 | 43 | 5 |
| Belt Speed (ft/min) | 1.5 | mJ/cm ² | 1,500 | 430 | 50 |
| F500™ @3.0" Dist | 3.0 | mW/cm ² | 500 | 160 | 15 |
| Belt Speed (ft/min) | 1.5 | mJ/cm ² | 1,500 | 480 | 45 |
| S20™ Spot (4-Pole LG) 0.4" Dist | mW/cm ² | 3,000 | 530 | 50 | 3,400 |
| Exposure Time (s) | 2.0 | mJ/cm ² | 6,000 | 1,060 | 100 |
| L9000™ LED Spot @ 0.67" Dist | mW/cm ² | 2,800 | 42 | 12 | 102 |
| Exposure Time (s) | 5.0 | mJ/cm ² | 14,000 | 210 | 60 |

Cure times on 8mm Ø adhesive sample. Belt speeds using C9000-F200Px1AB (Flood) and C9000-F500x1AC (Focused Beam) conveyors for area curing. Please consult InCureLab™ for any other requirements.

TENSILE STRENGTH VS TEMPERATURE

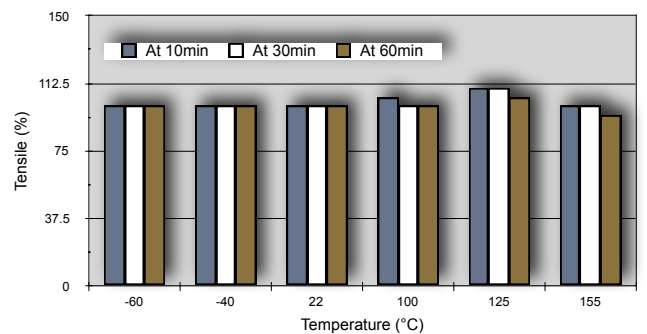

UV INTENSITY REFERENCE TABLE

| InCure UV Curing Lamp Model | ⁴ Curing Distance vs UV Intensity | | | | | |
|-------------------------------------------|----------------------------------------------|------------|------------|------------|-------------|-----------|
| | 0.5" (12.6) | 1" (25.4) | 1.5" (38) | 2" (50.8) | 2.5" (63.5) | 3" (76.2) |
| Spot Curing (Ø mm) | 1,400 (3) | 1,500 (4) | 650 (6) | 360 (8) | 240 (10) | 175 (12) |
| S20™ ARC (mW/cm ²) / (Ø mm) | 7,500 (9) | 5,000 (10) | 2,300 (17) | 1,200 (20) | 700 (25) | 450 (30) |
| L9000™ LED (mW/cm ²) / (Ø mm) | UV Intensity (mW/cm ²) | | | | | |
| Flood/Focus Beam - Area Curing | 325 | 280 | 245 | 215 | 190 | 165 |
| F200™ ARC Flood (6" x 8") | 860 | 570 | 440 | 345 | 270 | 215 |
| F400™ ARC Flood (4" x 4") | 1,040 | 685 | 530 | 415 | 325 | 260 |
| F500™ ARC Focused (3" x 5") | 2,675 | 2,380 | 1,900 | 1,625 | 1,430 | 1,280 |
| L1044-365™ LED Flood (4" x 4") | 2,950 | 2,625 | 2,150 | 1,900 | 1,650 | 1,450 |
| L1044-405™ LED Flood (4" x 4") | | | | | | |

⁴ Curing Distance is defined by the tip of light-guide or base of lamp housing to the bond area. All values are nominal with ±10% variation, with LED Flood Static Uniformity at ±78% and Dynamic Uniformity at ±90%. Recommended curing parameters in grey.

SECONDARY HEAT CURE (Not Applicable)

| Continuous Oven Bake | Duration |
|----------------------|----------|
| 95°C (203°F) | 120 mins |
| 110°C (230°F) | 60 mins |
| 125°C (257°F) | 30 mins |

InCure, Inc.
1 Hartford Square, Box 16 West,
Suite C-3, New Britain,
CT 06052, USA
Tel: (860) 748 2979
support@uv-incure.com

InCure Adhesives Manufacturing Pte Ltd
33 Ubi Avenue 3 #04-23,
Vertex Tower B,
Singapore 408868
Tel: (65) 6509 3670
www.uv-incure.com



CURING SCHEDULE FOR THIS PRODUCT (Not Applicable for this Product)

If you are unable to fully cure this product for some reasons, pls email us for assistance with your curing information. Below are the curing parameters:

| | | | |
|--------------------------------------------|------------------------------------------|-----------------------------------------|--------------------------------------------|
| UVA (320-400nm) = 1,500 mW/cm ² | UVB (290-320nm) = 480 mW/cm ² | UVC (290-220nm) = 45 mW/cm ² | VUV (400-700nm) = 1,440 mW/cm ² |
|--------------------------------------------|------------------------------------------|-----------------------------------------|--------------------------------------------|

Note: This product has been thoroughly tested to cure with F200P™ UV Flood Lamp. Intensity wavelengths (shaded) are crucial for curing this product. All measurements are made with EIT UV PowerPuck II.

SHELF-LIFE, STORAGE, USE AND HANDLING OF THIS PRODUCT

Shelf-Life of this unopened product is a minimum of ONE (1) year from date of manufacture. Avoid direct exposure of bottle to visible light at all times. Containers should remain covered when not in use. Product should be stored in a dark cool place of 2°C to 20°C. Transfer of product into other packages void all warranties. Users should ensure all bonding surfaces are free of grease, mold release, or any contaminants, as bonding performance will be compromised. All tests for cured bonds should be carried out at ambient temperature. For safe handling of this product, please read Material Safety Data-sheet (MSDS) prior to use. Organic solvents, such as IPA, may be used to wipe away uncured material from surfaces.

EtO and GAMMA STERILIZATION

All InCure Medical products are formulated to subject to standard sterilization methods, such as EtO and Gamma Radiation of 25 to 50 kGrays (cumulative). Enhanced moisture and thermal resistance of this product show excellent adhesion and bonding strength after one cycle of steam auto-clave test. Depending on bond design and structure of the application, users should test specific assemblies after subjecting them to the test requirements. Please consult InCure Support Team for assistance, if your devices are subjected to more than one sterilization cycles.

NOTE

The data contained in this document are furnished for information only. We cannot assume responsibility for the results obtained by others over whose methods we have no control. It is the user's responsibility to determine suitability for the user's purpose of any production methods mentioned herein. INCURE will not be liable for any indirect, special, incidental or consequential loss or damage arising from this INCURE product, regardless of the legal theory asserted. INCURE recommends that each user adequately test its proposed use and application before repetitive use, using this data as a guide.